

Handling Discs

Inserting and Removing Disc


INSERTING DISC

- 1 Press down the DISC EJECT button once and release it.


A few moments after the ACCESS/PC indicator blinks, the cover of disc insertion block will open.

- 2 Gently open the cover by hand fully until it stops.

- 3 Push the disc against the turntable at the center to lock it until a click is heard.

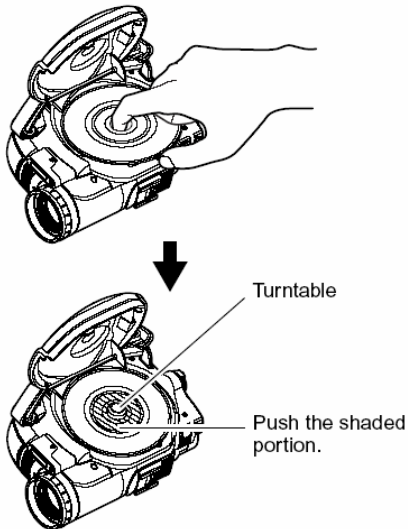

- Note that the recording surface of disc must face the inside of DVD video camera/recorder.
- Never touch the disc recording surface or pickup lens.

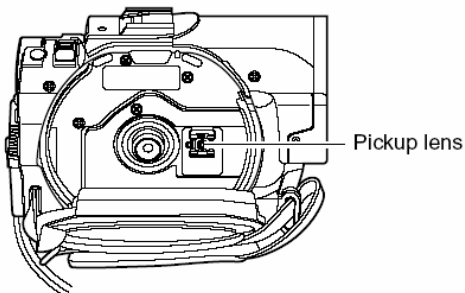

- Use the disc cleaning cloth provided to wipe off any dirt adhering to the disc recording surface.
- Do not use a dirtied or scratched disc.
- The recording side must face the inside (DVD video camera/recorder).

- 4 Push the section marked "PUSH CLOSE" on the cover of disc insertion block, to close the cover.

Then the DVD video camera/recorder will automatically recognize the disc: While the ACCESS/PC indicator is lit, do not cut off the power supply, and do not subject the DVD video camera/recorder to any vibrations or impact.

● Identifying recording sides of disc:


Single sided disc:

The recording side is opposite to the printed label.

Double-sided disc:

The recording side of "SIDE A" is opposite to the "SIDE A" marked side.

The recording side of "SIDE B" is the "SIDE A" marked side.

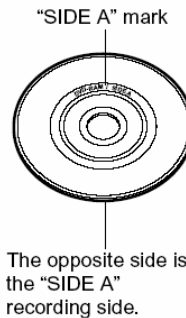


REMOVING DISC

- 1** Press down the DISC EJECT button once and release it.

In a moment, the cover of disc insertion block will open.


If the DVD video camera/recorder is on at this time, the "EJECT" indicator will blink on the LCD monitor or in the viewfinder.

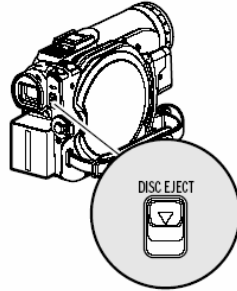

Note:


- Do not remove the battery or disconnect the AC adapter/charger during removal of the disc or until power is completely turned off: If you do, the disc cover will not open. If this happens, reattach the battery or AC adapter/charger, push down the DISC EJECT button once, and then release it.
- Do not insert anything other than the 8 cm DVD-RAM or DVD-R disc into the disc insertion block: Doing so could cause malfunctions.
- When inserting or removing the disc, BE SURE NOT to look into the lens in laser pickup: Doing so could damage your eyesight.
- If the battery remaining level runs out, set the power switch to "OFF" to remove the disc.

- 2** Gently open the cover fully until it stops.

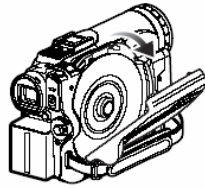

- 3** Remove the disc.

While pushing down the center portion of turntable, pick up the disc, holding its edge, to remove it.

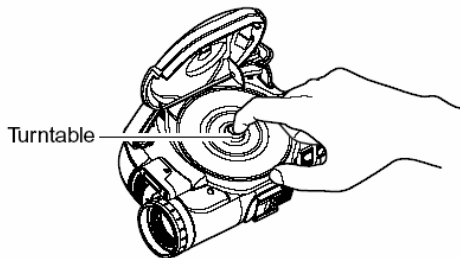

- 4** Gently push the section indicated "PUSH CLOSE" on the cover of disc insertion block, to close the cover.

