

Notes on Erasing Using DVD-MovieAlbum

▪ Note on Erasing Images Using DVD-MovieAlbum


If you erase images once, they will be unrecoverable since DVD-MovieAlbum edits disc information directly. Before erasing image data, please check the contents very carefully.

▪ About Title Erase Function


To prevent erasing entire titles using DVD-MovieAlbum, the title erase function is disabled by default and the **Erase** button is grayed out. An instruction to enable the erasing title function is provided below.

To enable the erasing title function:

1. Click the **Preference** button in DVD-MovieAlbum window.

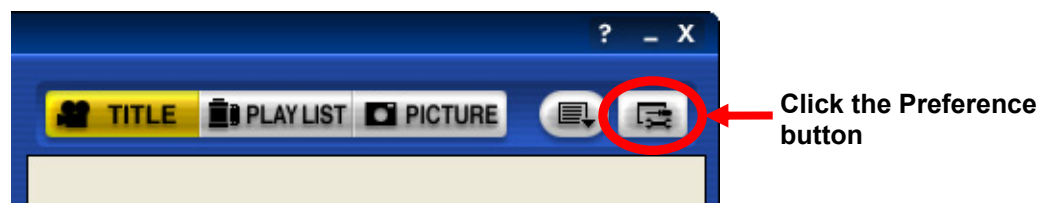

2. In the **Preference** dialog box, click the **Edit setting** tab.
3. Under the **Erase Title** in the **Title** group, select **On**, and then click **OK**. By this, the title erase function is enabled.

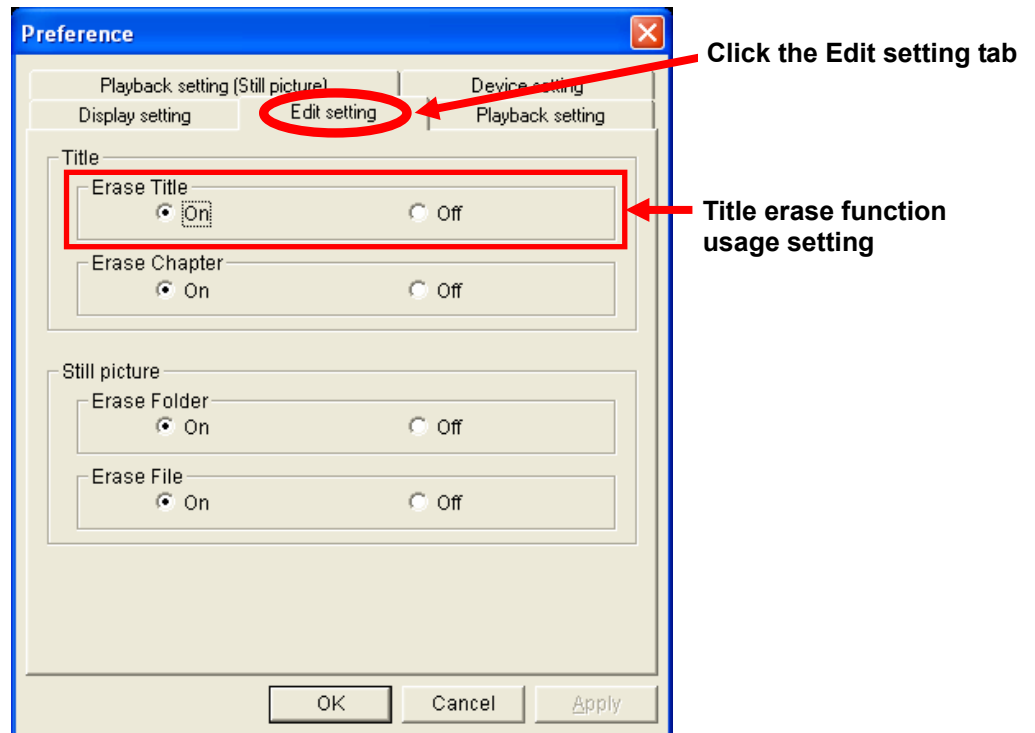

DVD-MovieAlbum's Preference Dialog Box