

Operation of Program Deletion Using DVD-MovieAlbumSE

Please be aware that DVD-MovieAlbumSE differs from the Disc Navigation function of the DVD video camera when deleting programs (interface). If you mistakenly operate to delete programs you will lose important movies you recorded. Please make sure of the operation before proceeding to delete programs using DVD-MovieAlbum.

| Operation | DVD Video Camera | DVD-MovieAlbumSE |
|--|---|--|
| <p>Deleting programs</p> <p>Note: The DVD video camera records a program by a date.</p> | <p>Not available</p> <p>(By repeating deleting a scene, a program can be deleted.)</p> | <p>Available</p> <p>(Click the Delete program button on the Program tab. By this operation, all the scenes included in the selected programs are deleted.)</p> |
| <p>Deleting scenes</p> <p>(Deleting a program between markers)</p> | <p>Available</p> <p>(Delete a scene from the Menu of the Disc Navigation.)</p> | <p>Not available</p> <p>(To perform an operation to deleting scenes, divide a program into two or more programs, delete a program that includes a scene you desire to delete, and then merge the programs, if necessary.)</p> |